

Quick User Manual



WFBJ90121/WFBJ90121S

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately.

- A. "On/Off" button
- B. "Start/Pause" button
- C. Program selector
- D. Program and function status display window
- E. "Extra Rinse" button



H G F E D

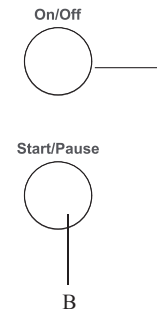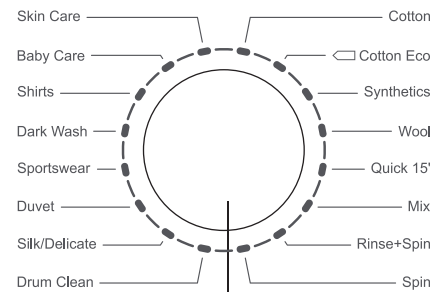

B A

Hisense

- F. "Prewash" button
- G. "Spin" button
- H. "Temp." button

Program	Care Label	Material / Level of Soiling	Maximum Wash Load kg	Detergent Compartmentt			Wash Program Functions						Maximum spin speed rpm
				Prewash	Main wash	Softener	Delay	Prewash	Extra rinse	Default rinse times	Spin	Temp.	
-Washing temperature selected as per the Care Label instruction.													
Cotton --,20°C, 30°C, 40°C, 50°C,60°C, 95°C		Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function.	9.0	*	Yes	*	*	*	*	2	*	*	1200
Cotton Eco (1) --,20°C, 30°C, 40°C, 50°C,60°C		Eco wash for cotton and linen. Can reduce washing time and power consumption.	9.0	*	Yes	*	*	*	*	2	*	*	1200
Skin Care --,20°C, 30°C, 40°C,		Extra rinse time. Making sure no residual detergent on textiles to protect skin form irritability.	4.0	*	Yes	*	*	*	*	4	*	*	1200
Baby Care --,20°C, 30°C, 40°C, 50°C,60°C, 95°C		Program to effectively extinguish bacteria in textiles. It is appropriate for clothes of babies who are sensitive to clothes.	4.0	*	Yes	*	*	*	*	3	*	*	1200
Synthetics --,20°C, 30°C, 40°C, 50°C,60°C		Moderately soiled synthetics, cotton blended fabrics.	4.0	*	Yes	*	*	*	*	2	*	*	1200
Wool --,20°C, 30°C, 40°C		Machine washable wool. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	*	2	*	*	600
Shirts --,20°C, 30°C, 40°C, 50°C,60°C		Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	4.0	—	Yes	*	*	—	*	2	*	*	800
Dark Wash --,20°C, 30°C, 40°C, 50°C,60°C		Dark textiles made of cotton and dark easy-care textiles	4.0	*	Yes	*	*	*	*	2	*	*	1000
Quick 15' --,20°C, 30°C, 40°C		Cotton, mixed fabrics. Items worn for a short time or newly bought.	1.0	—	Yes	*	*	—	*	2	*	*	1000
Mix --,20°C, 30°C, 40°C		Mixed loads of moderately soiled cotton and synthetic fabrics.	4.0	*	Yes	*	*	*	*	2	*	*	1200
Sportswear --,20°C, 30°C, 40°C		Sportswear and leisure wear made from microfibre fabrics.	4.0	*	Yes	*	*	*	*	2	*	*	1000
Duvet --,20°C, 30°C, 40°C		Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down.	4.0	—	Yes	*	*	—	*	2	*	*	600
Silk/Delicate --,20°C, 30°C, 40°C		Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	*	2	*	*	600
Drum Clean 95°C	—	Program to remove dirt and bacterial residue that can breed in the machine after it has been used for a period, especially when low temperature washes are used regularly.	—	—	Yes	—	—	—	—	1	—	—	600
Rinse +Spin	—	This program is defaulted to two rinses and spin.	9.0	—	—	*	—	—	*	2	*	—	1200
Spin	—	Select the length, and speed, of the spin manually.	9.0	—	—	—	—	—	—	0	*	—	1200

* : Optional Functions Yes : Detergent Required — : Cannot be selected -- : Temperature of unheated water

(1) Wash performance test programs are: cotton eco 60°C, maximum speed; cotton eco 40°C, maximum speed.

Energy consumption 201 kwh per year, based on 220 standard washing cycles for cotton eco programmes at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used.

Water consumption 9240 litres per year, based on 220 standard washing cycles for cotton eco programmes at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

PARAMETER	
Model	WFBJ90121/WFBJ90121S
Washing Capacity	9.0kg
Max.spin speed	1200rpm
Net Weight	73kg
Dimension(WXDXH)	595X610X845mm
Rated Voltage	220-240V~
Heating Power	1900W
Washing Power	300W


- Select Delay function after you have selected the program and other options.
- Press **“Spin +Prewash”** button for 3 seconds. The Delay icon will light up and the program will be set. The delay time will increase/decrease by every time you press **“Prewash/Spin”** button.Keep pressing **“Prewash/Spin”** for more than 1 second, the delay time will increase/decrease by 1 hour every 0.5 seconds. The delay time selected must be between 01:00 and 24:00. When 24:00 is selected, the program will be canceled if you press the **“Prewash”** button again.
- The delay time must be longer than the wash program length as the delay time is the time program will finish. For example: if the selected program time is 02:28, the delay time selected must be between 03:00 and 24:00.
- After the delay time has been selected, press the **“Start/Pause”** button. The display time will start to count down. When the display time is down to the program length, the Delay icon will go out. The program will start.
- To cancel the delay time during the delay program, you need turn the machine off by pressing **“On/Off”** button for 2 seconds.
- The Delay function is not available for some programs, e.g. **“Rinse + Spin, Spin”**.

Add Detergent, Close the Door and Set the Program

Load the clothes to be washed in the drum and close the door. Add the detergent into the relevant compartments for the type of program you are going to select, Add detergent as described in **Detergent and Additives** section of **User's Operation Manual**.

- 1.Press the **“On/Off”** button.
- 2.Rotate the selector dial to the required program.
- 3.The display window will show the program length (hours : minutes), temperature, spin speed and additional function options.
4. Press the **“Temp.”** button to set the desired wash temperature and the **“Spin”** button to select the spin speed.

Prewash

- 1.Press the **“Prewash”** button until the Prewash indicator lights up. Add detergent into the prewash chamber .
- 2.The Prewash indicator flashes during the operation. After the operation finished, the indicator turns off automatically.

Extra Rinse

1. This function is adding maximum 3 rinse times during washing process.
2. It is suitable for washing baby clothes, or for the people who are sensible to detergent.
3. Before starting the washing process, press **“Extra Rinse”** button. Lighten the **“Extra Rinse”** indicator; **“P-1”** indicates adding extra rinse once, **“P-2”** indicates adding extra rinse twice, **“P-3”** indicates adding extra rinse three times. During the rinse process, the indicator flashes; after the process, the indicator is turned off automatically.

Delay Function

Delay function allows to run the machine at the consumers' convenience, for example, at night when electricity is cheaper.

Child Lock

To strengthen the safety of children, this machine is equipped with Child Lock function.

When the programme starts, press **“Temp. +Spin”** button for 3 seconds. Child Lock icon will light up, and then Child Lock is set up. Repeat the same operation, the Child Lock will be released.

- When the Child Lock is set, all function buttons will be shielded.
- When you turn the machine off by pressing the **“On/Off”** button, child lock is released.

Door Lock Icon

After the program starts the Door Lock icon will light up and the door will be locked.

- The door is always locked when a program is running. It is not possible to open the door while the icon is flashing. Trying to forcibly open the door will cause damage to the appliance.
- If you wish to open the door due to an emergency you must press the **“Start / Pause”** button. It is important to check the spin speed of the drum, the level of the water inside the drum, and the temperature of water, before trying to open the door.
- If the door would not open after 2 – 3 minutes you can select the spin program to drain the water from the drum. Switch off the appliance and open the door.

Safety Notice: If the program is interrupted during the wash, the temperature of the items inside, and the drum, may be very high. To avoid any scalding, or burns, care must be taken before removing any clothes from the drum.

Tap Icon

Inlet Water Tap Icon Lights Up.

If the appliance detects that no water has entered the drum, the Tap icon will light up. Make sure the water tap is turned on and press the **“Start / Pause”** button. If the icon still lights up, please refer to the User's Operation Manual **Troubleshooting Guide**.

Draining Pump Icon

The Draining Pump Icon Lights Up.

If the appliance detects that water in the drum has not been drained up, the Draining Pump icon will light up. Please make sure before the drainage process starts, the water in the drum has been cool down, the drain hose has not been frozen, knotted, or blocked, and the draining pump filter has not been blocked.

After all the checking, please press **“Start/Pause”** button. If the Draining Pump icon still lights up, please unplug the washing machine, and contact the After-Sales Service department.

Reload in Process

If you want to reload clothes in the process of washing, please press **“Start/Pause”** button.

- If the door can be opened in the process, remaining time and the Door Lock icon in display will flash. After 2 - 3 minutes, the Door Lock icon will go out, and the door can be opened.
- If the Door Lock icon doesn't flash, it indicates that current temperature is over 50 C or you have passed the time for reloading in the process, namely no clothes allowed to load into the machine.

Programme Instructions

1. The standard 60 C and 40 C cotton programmes, referred to as 'standard 60 C cotton programme' and 'standard 40 C cotton programme', and that they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, in addition, the actual water temperature may differ from the declared cycle temperature.
2. The power consumption of the off-mode is 0.49W, and of the left-on mode is 0.49W.
3. The type of detergents suitable for the various washing temperatures.
4. The information of standard programmes:

	CO40 _{1/2}	CO60 _{1/2}	CO60
Main Wash Duration (Min)	168	198	198
Programme (Min)	210	240	240
Energy Consumption (kWh)	0.80	1	0.93
Water Consumption – Main Wash (L)	13.6	13.6	19.4
Total Water Consumption (L)	38	38	54
Remain moisture content (%)	53	53	52