


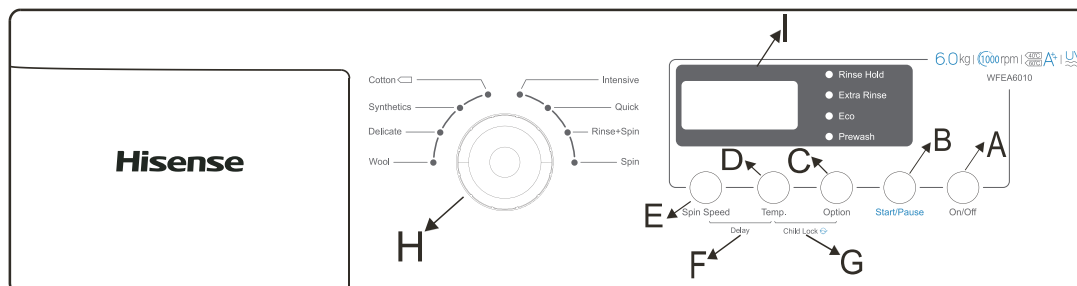















# WFEA6010/WFEA6010S

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately.

- A: "On/Off" button  
 B: "Start/Pause" button  
 C: "Option" button  
 D: "Temp." button  
 E: "Spin Speed" button



- F: "Delay" button  
 G: "Child lock" button  
 H: Programme selector  
 I: Time and temperature display

Program	Care labels	Type of wash/Notes  - Respect the manufacturer's recommendations on the care label	Max. load Kg	Detergents and softener			Washing Function Selection								Reload in process	Max. spin speed
				Prewash 	Main wash 	Softener 	Time	Temperature Control	Rinse Hold	Extra Rinse	Economic Wash	Prewash	Spin Speed	Rpm/min		
Cotton (3) Cold, 20°C,30°C, 40°C, 50°C, 60°C, 95°C	   	"Prewash" function can be extra selected for normally to heavily soiled table linen, towels, shirts etc. made of cotton and lien	6.0	*	Yes	*	*	*	*	*	*	*	*	*	1000	
Synthetics Cold, 20°C,30°C, 40°C, 50°C, 60°C	 	Normally soiled garments made of artificial fibers (like polyester, polyacryle, viscose etc.) or their blends with cotton	2.5	*	Yes	*	*	*	*	*	*	*	*	*	800 <sub>(1)</sub>	
Delicate Cold, 20°C,30°C, 40°C, 50°C, 60°C	 	Curtains and delicate clothing, dresses skirts, shirts and blouses	1.5	*	Yes	*	*	*	*	*	—	*	*	— <sub>(2)</sub>	800 <sub>(1)</sub>	
Wool Cold, 20°C,30°C,40°C		Only woolens, labeled with the Woolmark and identified as machine washable If you select "Rinse Hold" do not leave items to soak for too long	1.0	—	Yes	*	*	*	*	*	*	—	*	*	600	
Intensive Cold, 20°C,30°C,40°C, 50°C,60°C,95°C	 	Lightly to normally soiled cotton or fiber fabric	6.0	*	Yes	*	*	*	*	*	*	*	*	*	1000	
Quick Cold, 20°C,30°C,40°C	 	Coat that be worn not long or just bought; sportswear made of cotton, polyester, polyamide fiber and blends	2.0	—	Yes	*	*	*	—	*	—	—	*	*	800	
Rinse + spin	—	Same as the last rinse and the final spin in the "Cotton" program	6.0	—	—	*	*	—	—	*	—	—	*	*	1000	
Spin	—	Spin time and speed can be selected separately	6.0	—	—	—	—	—	—	—	—	—	*	*	1000	

\* : Optional    Yes: Dosing required    -: may not select

(1) To care clothes, spin speed shall be limited to 800rpm/min.    (2) "Reload in process" can be selected if Prewash is selected

(3) Energy consumption 170 kwh per year, based on 220 standard washing cycles for cotton programmes at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used.  
 Water consumption 8990 litres per year, based on 220 standard washing cycles for cotton programmes at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

PROGRAMME DATA		
Programme	Temperature °C	Approx. Duration (hours: minutes) ※
Cotton	Cold,20,30,50,95	1:18,1:23,1:28,1:39,1:49
Cotton ※※	40,60	2:40,2:59
Synthetics	Cold,20,30,40,50,60	1:00,1:07,1:10,1:10,1:20 1:20
Delicate	Cold,20,30,40	1:22
Wool	Cold,20,30,40	0:45
Intensive	Cold,20,30,40,50,60,95	1:28,1:33,1:38,1:38,1:49 1:49,1:59
Quick	Cold,20,30,40	0:15,0:20,0:25,0:35

- ※ The actual running time can deviate from the values in the table, because it takes into account the household conditions applicable at that time
- ※※ Reference programme for Energy Labeling according to the European Standards

### Add detergents, close the door and select the programme.

Add detergent as described in the chapter “**Detergent and Additives**” and close the door. (Please select proper non-foaming or low-foaming detergent)

- Turn the **Programme Selector** button to the desired programme position.
- The time display shows the duration of the chosen programme (in hours and minutes).

**Note:** The actual running time of the programme can be adjusted automatically according to washing situation and may be different from display time.

### Select Any Desired Option

Press the selected option button once, and the corresponding indicator turns on.  
If the selected programme and option cannot be combined, these functions will fail to be selected automatically and indicator will turn off automatically.

#### Rinse Hold

- If you select “**Rinse hold**”, the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing.
- It is recommended to select the function when washing synthetic or delicate wear.
- If you want to delay spin, the function will be useful.

**Note:** When the programme runs to the step before spin, the machine will delay spinning.

#### How to end Rinse Hold function.

- Press “**Start/Pause**” button or function button, and then the washing machine will run spinning progress automatically. When spinning finishes, the programme ends.

Parameter	
Model	WFEA6010/WFEA6010S
Washing capacity	6.0Kg
Max. spin speed	1000 rpm/min
Net Weight	58Kg
Dimension (LxWxH)	60×45×85cm
Rated Voltage	220-240V~
Heating Power	1900W
Washing Power	300W

### Temperature

Each programme is corresponding to its default temperature. If needed, press “**Temp.**” button to adjust.

### Reload in Process

If you want to reload clothes in the process of washing, please press “**Start/Pause**” button.

- If the door can be opened in the process, remaining time and child lock indicators in display will flashes. Until child lock indicator turns off, you can open the door to load clothes.
- If the child lock indicator doesn’t flash, it indicates that current temperature is over 50°C or you have passed the time for reloading in the process, namely no clothes allowed to load into the machine.

### Programme Start

Switch on and select program required and corresponding function keys, then press the “**Pause/Start**” button to run the program

### Delay

Delay function allows to run the machine at the consumers convenience, for example, at night when electricity is cheaper.

- Select programme, temperature and options.
- Press “ **Spin Speed +Temp.** ” button to select the delay time by 1 to 23 hours; delay time shall be longer than wash time;
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.

•If the programme starts, the digital window will display the remaining time and “**Delay**” alternatively; when the time counts down to the total wash time, it will only display the remaining time and the washing starts.

#### Cancel Delay

- Before pressing “**Start/Pause**” button, turn programme selector to another programme position.

### Child Lock

To strengthen the safety of children, the machine is equipped with “**Child Lock**” function.

- When the programme starts, press “**Temp. + Option**” button simultaneously, LED will display “**SAFE ON**” after buzzing, and then **Child Lock** is set up;
- When the single lock is set, all function buttons will be shielded;
- When the programme starts, press “**Temp. + Option**” button simultaneously, LED will display “**SAFE OFF**” after buzzing, and then **Child Lock** is released;
- When power is shut down, child lock is released.

### Programme End

The washing machine is equipped with a power manager system.The duration of the left-on mode is 30 second.

- Press “ **On/Off** ” button for 2 seconds to turn off the machine;
- Close the tap;
- Open the door and take the washed clothes out;
- Slightly open the door to remove moisture in the pump.

### Change programme or optional function after the programme starts.

- Press “ **On/Off** ” button for 2 seconds to turn off the machine;
- Restart the machine and select new programme and options. If needed, select spin speed.
- Re-press “**Start/Pause**” button to start new programme. Don’t add detergent any more.

### Programme instructions

- The standard 60°C and 40°C cotton programmes,referred to as “**standard 60°C cotton programme**” and “ **standard 40°C cotton programme**”,and that they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry,in addition,the actual water temperature may differ from the declared cycle temperature.
- The power consumption of the off-mode is 0.49W,and of the left-on mode is 0.49W.
- The type of detergents suitable for the various washing temperatures.
- The information of standard programmes:

	CO40 <sub>1/2</sub>	CO60 <sub>1/2</sub>	CO60
Main wash duration (min)	130	149	149
Programme time (min)	160	179	179
Remaining moisture content (%)	63	63	63
Energy consumption (kWh)	0.51	0.89	0.85
Water consumption during main wash(L)	13	13	18
Total water consumption(L)	42	42	47