


**WF(B)P1014V/  
WF(B)P1014VS/  
WF(B)P1014VB**

- A. “On/Off” button  
B. “Start/Pause” button  
C. Program selector  
D. Program and function status display window  
E. “Select” button  
F. “Option” button  
G. “Spin” button  
H. “Temp.” button

## Short User Manual

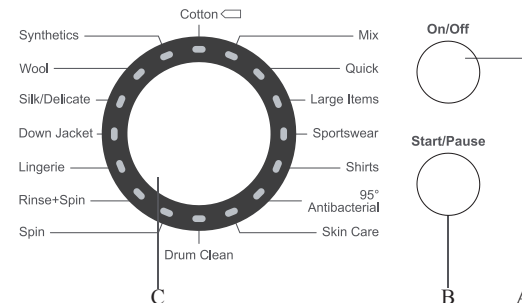

# Hisense

- I. “Crease Care” button  
J. “Rinse” button  
K. “Wash” button  
L. “Delay” button  
M. Functions state

Program	Care Label	Material / Level of Soiling	Maximum Wash Load kg	Detergent Compartment			Wash Program Functions										Maximum spin speed rpm		
				Prewash	Main wash	Softener	Delay	Wash	Default rinse times	Crease Care	Temp.	Spin	Prewash	Eco wash	Intensive wash	Rinse hold		Night wash	
		-Washing temperature selected as per the Care Label instruction.																	
Cotton <sup>(1)</sup> Cold, 20°C, 30°C, 40°C, 60°C, 95°C		Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function.	10.0	*	Yes	*	*	*	2	*	*	*	*	*	*	*	*	*	1400
Synthetics Cold, 20°C, 30°C, 40°C, 60°C		Moderately soiled synthetics, cotton blended fabrics.	5.0	*	Yes	*	*	*	2	*	*	*	*	*	*	*	*	*	1400
Mix Cold, 20°C, 30°C, 40°C		Mixed loads of moderately soiled cotton and synthetic fabrics.	5.0	*	Yes	*	*	*	2	*	*	*	*	*	*	*	*	*	1400
Quick Cold, 20°C, 30°C, 40°C		Cotton, mixed fabrics. Items worn for a short time or newly bought.	1.0	—	Yes	*	*	—	1	*	*	*	—	—	—	*	—	800	
Silk/Delicate Cold, 20°C, 30°C, 40°C		Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	3	*	*	*	—	—	—	*	—	600	
Wool Cold, 20°C, 30°C, 40°C	—	Machine washable wool. (Refer to the washing label attached to the clothing). Suggested washing temperature - 40°C.	2.0	—	Yes	*	*	—	3	*	*	*	—	—	—	*	—	600	
Large Items Cold, 20°C, 30°C, 40°C, 60°C		Program adapted to wash large items - e.g. Curtains, sheets, duvet covers.	10.0	*	Yes	*	*	*	3	*	*	*	*	*	*	*	*	1000	
Down Jacket Cold, 20°C, 30°C, 40°C		Program adapted to wash down jackets.	2.0	—	Yes	*	*	*	2	*	*	*	—	—	—	*	—	600	
Sportswear Cold, 20°C, 30°C, 40°C		Synthetic fabric sportsware.	5.0	*	Yes	*	*	*	2	*	*	*	*	*	*	*	*	1000	
Lingerie Cold, 20°C, 30°C, 40°C		Program adapted to wash Cotton underwear.	5.0	*	Yes	*	*	*	3	*	*	*	*	*	*	*	*	800 <sup>(2)</sup>	
Shirts Cold, 20°C, 30°C, 40°C, 60°C	—	Program adapted to wash Shirts.	5.0	—	Yes	*	*	*	2	*	*	*	—	*	*	*	*	800 <sup>(2)</sup>	
Rinse +Spin	—	This program is defaulted to two rinses and spin.	10.0	—	—	*	*	—	2	*	—	*	—	—	—	*	—	1400	
95°Antibacterial 95°C		Program to effectively extinguish bacteria in clothing and cotton fabrics under high temperature without discoloring.	3.0	—	Yes	*	*	—	3	*	—	*	—	—	—	*	—	1400	
Spin	—	Select the speed of the spin manually.	10.0	—	—	—	*	—	0	*	—	*	—	—	—	—	—	1400	
Skin Care Cold, 20°C, 30°C, 40°C	—	Program intended for people who have sensitive skin, it can rinse clothes thoroughly and remove any residual detergent effectively.	3.0	—	Yes	*	*	—	5	*	*	*	—	—	—	*	—	1000	
Drum Clean 95°C	—	Program to remove dirt and bacterial residue that can breed in the machine after it has been used for a period, especially when low temperature washes are used regularly.	—	—	Yes	—	—	—	2	—	—	*	—	—	—	—	—	600	

\* - Optional Functions      Yes - Detergent Required      — - Cannot be selected

(1) Wash performance test programs are: cotton , spin speed 1400r/min, intensive wash, rinse 2 times; cotton , spin speed 1400r/min, intensive wash, rinse 2 times. (2) To protect clothing, the spin is limited to 800rpm.

(3) Energy consumption 191 kWh per year, based on 220 standard washing cycles for cotton eco programmes at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. Water consumption 11000 litres per year, based on 220 standard washing cycles for cotton eco programmes at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

PARAMETER	
Model	WF(B)P1014V/WF(B)P1014VS/ WF(B)P1014VB
Washing Capacity	10.0kg
Max.spin speed	1400rpm
Net Weight	78kg
Dimension(WXDXH)	595X660X845mm
Rated Voltage	220V-240V ~
Heating Power	1900W
Washing Power	100W

## Add detergent, close the door and set the program

Load the items to be washed in the drum. Add the detergent into the relevant compartments for the type of program you are going to select, see the Detergent Compartment section on page.

- 1.Press the **On/Off** button.
- 2.Rotate the selector dial to the required program.
- 3.The display window will show the program length (hours : minutes), temperature, spin speed and additional function options.
- 4.The recommended temperature and spin speed will flash on the display. Press the **Temp.** button to set the desired wash temperature and the **Spin** button to select the spin speed.

## Select additional functions

To change, or add any of the functions, press the respective button and the display will flash. Press the button again until the chosen option flashes and then press **Select**.

### Prewash

Press the **Option** button until the Prewash icon flashes and press **Select**. Add detergent into the Prewash compartment of the detergent drawer.

### Eco wash

Press the **Option** button until the Eco icon flashes and press **Select**. This function is designed to reduce the amount of electricity, water used and save time during the program. The Eco icon will light up.

### Intensive wash

Press the **Option** button until the Intensive Wash icon flashes and press **Select**. This function will prolong the wash time with a more intense wash action for washing heavily soiled items. This function cannot be selected if you select Eco Wash function.

### Rinse hold

Press the **Option** button until the Rinse Hold icon flashes and press **Select**. Selecting this function will keep the

clothing suspended in water after the last rinse, to prevent the fabrics from creasing. To spin the clothing, and complete the program, press the **Start / Pause** button. The items can then be removed straight away after the program has finished.

### Night wash

- Decrease final dewatering rotational speed to reduce noise.
- Cancel all buzzer sounds, except alarm sound.
- Crease Care function will be selected automatically when Night wash function is selected.

### Memory

- When Memory function is selected, parameters of current program will be memorized after this program starts to operate.
- After memory parameters are saved, memory function needs to be selected to recall the parameters which have been saved.
- If you wish to change your favorite settings, it is necessary to select memory function as well to save your new settings.

## Delay Function

Select Delay after you have selected the program and other options.

- Press the **Delay** button once and the delay time will increase by 30 minutes. Press and hold the button and the delay time will increase by 30 minutes every 0.4 seconds. The delay time can be programmed for between 30 minutes to 24 hours.
- The delay time must be longer than the wash program length as the delay time is the time the program will finish.

For example: if the selected program time is 02:28, the delay time selected must be between 02:30 and 24:00.

- After the delay time has been selected, press the **Start /Pause** button and the display will start to count down. When the delay time is down to the program length time the Delay icon will go out and the program will start.
- To cancel the delay time, after the **Start /Pause** button has been pressed, but before the program has started, it will be necessary to press the **On/Off** button and turn the washing machine off.
- The Delay function is not available for Drum clean 95°C programs.

## Crease Care

When a wash program with crease care selected ends, the drum will rotate intermittently to prevent clothes from creasing, and the time in the display window will stop at 0:01. Press the **Crease Care** or **Start/Pause** button if you want to take clothes out. **Crease Care** function will be enabled automatically when Delay and Night Wash functions are selected. Press **Crease Care** button again if you want to disable it.

## To Start the Program

After you have selected your options and placed detergent within the dispenser box, turn on the water tap and press the **Start / Pause** button. The screen will display the current program progression with icons from left to right. It also displays the remaining program time.

## End of the Program

When the program is finished, the display will show “End” and the machine will turn off after 30 seconds. The door lock will also release within 2 – 3 minutes.

- 1.Turn off the water tap.
- 2.Open the door and remove the washing.
- 3.Leave the door open slightly to discharge any humidity from inside.

## To Cancel the Program or reselect the options

- 1.Press the **On/Off** button for 2 seconds to shut down the program.
- 2.Select the new program and options.
- 3.Press **Start / Pause** to start the new program without adding any extra detergent.

## Mute Function

The buzzer and alarm can be turned off by pressing the **Delay** and **Wash** buttons at the same time for 3 seconds.

## Child lock

To protect children the appliance has a child lock function. This will disable the program selector dial and the option buttons.

- After the program has started press the **Temp.** and **Spin** at the same time for 3 seconds.
- Follow the above steps to unlock this function.

## Door Lock Icon

After the program starts, the door lock icon will flash and the door will be locked.

- The door is always locked when a program is running. It is not possible to open the door while the icon is flashing, and trying to forcibly open the door will cause damage to the appliance.
- If you wish to open the door due to an emergency, you must press the **Start / Pause** button. It is important to check the level of the water inside the drum, and the water temperature, before trying to open the door.
- If the door will not open after 2 – 3 minutes you can select the spin program to drain the water from the drum. Switch off the appliance and open the door.

**Safety Notice.** If the program is interrupted during the wash, the temperature of the items inside, and the drum, may be very high. To avoid any scalding, or burns, care must be taken before removing any items from the drum.

## Tap Icon

### Inlet Water Tap Icon Flashes

If the appliance detects that no water has entered the drum the tap icon will flash. Make sure the water tap is turned on and press the **Start / Pause** button. If the icon continues to flash please refer to the user manual **Failure Handling Guidance**. If this should happen during the program, the display will show a failure code. A description of the failure codes can be found in the **User Manual**.

## Adding Clothes After the Program Has Started

If you need to add other items of clothing after the program has started you must check the level of the water inside the drum. If it is safe to open the door press the **Start / Pause** button.

- The remaining program time on the display will flash.
- The door lock indicator will go out and the door can be opened after 2 – 3 minutes.
- If the door lock does not stop flashing this indicates that the temperature inside the drum is above 50°C, or it is too late in the program to add further items of clothing.

## Programme instructions

1. The standard **<60°C** and **<40°C** cotton programmes, referred to ‘standard 60 °C cotton programme’ and ‘standard 40 °C cotton programme’, and that they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, in addition, the actual water temperature may differ from the declared cycle temperature.
2. The power consumption of the stand-by mode is 0.49W, and when off (no display) is also 0.49W.
3. Please choose suitable detergents suitable for the various washing temperatures.
4. Remaining moisture content: 53%.
5. The energy consumption information of standard programmes is shown in the table below:

	CO40 <sub>1/2</sub>	CO60 <sub>1/2</sub>	CO60
Main Wash Duration (Min)	180	218	218
Programme (Min)	224	255	255
Energy Consumption (kWh)	0.76	0.90	0.88
Water Consumption – Main Wash (L)	16	16	21
Total Water Consumption (L)	45	45	55