


Short User Manual

Hisense

WFU6012/WFU6012S

This function provides automatic safety protection function that makes automatic test, diagnosis and proper response to the early failure.

- A. "Power" button
- B. "Start/Pause" button
- C. Program selector
- D. Program and function status display window
- E. "Select" button

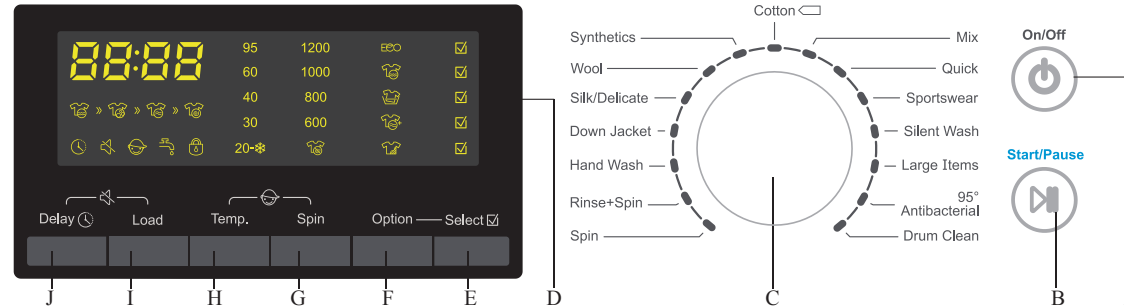

- F. "Option" button
- G. "Spin" button
- H. "Temp." button
- I. "Load" button
- J. "Delay" button

Program	Care Label	Material / Level of Soiling	Maximum Wash Load kg	Detergent Compartment			Wash Program Functions										Maximum spin speed rpm	
				Prewash	Main wash	Softener	Delay	Prewash	Load	Extra rinse	Intensive wash	Default rinse times	Eco wash	Rinse hold	Spin	Temp.		
Cotton 20°C, 30°C, 40°C, 60°C, 95°C		-Washing temperature selected as per the Care Label instruction. Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function(1).	6.0	*	Yes	*	*	*	*	*	*	*	2	*	*	*	*	1200
Synthetics 20°C, 30°C, 40°C, 60°C		Moderately soiled synthetics, cotton blended fabrics.	2.5	*	Yes	*	*	*	*	*	*	*	2	*	*	*	*	1200
Mix 20°C, 30°C, 40°C		Mixed loads of moderately soiled cotton and synthetic fabrics.	2.5	*	Yes	*	*	*	*	*	*	*	2	*	*	*	*	1200
Quick 20°C, 30°C, 40°C		Cotton, mixed fabrics. Items worn for a short time or newly bought.	1.0	—	Yes	*	*	—	—	*	*	1	—	—	*	*	*	800
Silk/Delicate 20°C, 30°C, 40°C		Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing).	2.0	*	Yes	*	*	—	*	*	*	2	*	—	*	*	*	600
Wool 20°C, 30°C, 40°C		Machine washable wool. (Refer to the washing label attached to the clothing). Suggested washing temperature - 40°C.	2.0	—	Yes	*	*	—	*	*	*	2	*	—	*	*	*	600
Hand Wash 20°C, 30°C, 40°C		Clothing marked as "Hand washable". If Rinse Hold is selected do not leave items to soak for too long.	2.0	*	Yes	*	*	*	*	*	*	2	*	*	*	*	*	800(3)
Large Items 20°C, 30°C, 40°C, 60°C		Program adapted to wash large items - e.g. Curtains, sheets, duvet covers.	2.5	*	Yes	*	*	*	*	*	*	2	*	*	*	*	*	1000
Down Jacket 20°C, 30°C, 40°C		Program adapted to wash down jackets.	2.0	*	Yes	*	*	*	*	*	*	2	*	—	*	*	*	600
95°Antibacterial 95°C		Program to effectively extinguish bacteria in clothing and cotton fabrics under high temperature without discolouring.	2.5	*	Yes	*	*	*	*	*	*	2	—	—	*	—	*	1200
Drum Clean 20°C, 30°C, 40°C, 60°C 95°C	—	Program to remove dirt and bacterial residue that can breed in the machine after it has been used for a period, especially when low temperature washes are used regularly.	—	—	Yes	—	—	—	—	—	—	1	—	—	*	*	*	600
Silent Wash 20°C, 30°C, 40°C	—	Program adapted to be used at night with little noise. The End of Program alarm is automatically deactivated(2).	2.5	*	Yes	*	*	*	*	*	*	2	*	*	*	*	*	800
Rinse +Spin	—	This program is defaulted to two rinses and one spin.	—	—	—	*	*	—	—	*	—	2	—	—	*	—	*	1200
Spin	—	Select the length and speed of the spin manually.	—	—	—	—	—	—	—	—	—	0	—	—	*	—	*	1200
Sportswear 20°C, 30°C, 40°C		Synthetic fabric sportswear.	2.0	*	Yes	*	*	*	*	*	*	2	*	*	*	*	*	1000

* - Optional Functions Yes - Detergent Required — - Cannot be selected

(1) Wash performance test programs are: cotton 60°C, load L-6, maximum speed, intensive wash; cotton 40°C, load L-6, maximum speed, intensive wash.

(2) At the end of the 'Silent wash' program, the drum will rotate for 10 seconds and rest for 10 seconds for air circulation and reducing creasing of the clothes. This will continue for 12 hours (Timer on the screen display will be locked to be 0:01), unless it is interrupted by pressing the start/pause button to complete the program.

(3) To protect clothing, the spin is limited to 800rpm.

PARAMETER	
Model	WFU6012/WFU6012S
Washing Capacity	6.0kg
Max.spin speed	1200rpm
Net Weight	58kg
Dimension(WXDXH)	595X460X850mm
Rated Voltage	220V-240V ~
Heating Power	1900W
Washing Power	300W

the program, press the **Start / Pause** button. The items can then be removed straight away after the program has finished. This function cannot be selected if you select Eco Wash function.

Extra Rinse

Press the **Option** button until the Extra Rinse icon flashes and press **Select**.

This function cannot be selected if you select Eco Wash function.

Intensive Wash

Press the **Option** button until the Intensive Wash icon flashes and press **Select**. This function will prolong the wash time with a more intense wash action for washing heavily soiled items. This function cannot be selected if you select Eco Wash function.

Delay Function

This function will allow to select the time your wash program will start.

Select Delay after you have selected the program and other options.

- Press the **Delay** button once and the delay time will increase by 30 minutes. Press and hold the button and the delay time will increase by 30 minutes every 0.4 seconds. The delay time can be programmed for between 30 minutes to 24 hours. To cancel the selection release the button and then press it again.
- The delay time must be longer than the wash program length as the delay time is the time the program will finish.

For example: if the selected program time is 02:28, the delay time selected must be between 02:30 and 24:00.

- After the delay time has been selected press the **Start /Pause** button and the display will start to count down. When the delay time is down to the program length time the Delay icon will go out and the program will start.

- To cancel the delay time, after the **Start /Pause** button has been pressed, but before the program has started, it will be necessary to press the **Power** button and turn the washing machine off.
- The Delay function is not available for some programs, e.g. Rinse + Spin, Spin.

Load

This model is capable of automatically adjusting the program to take into account the weight of the load placed inside the drum. It is possible to cancel this function by pressing the Load button. The weight of the load can be selected manually.

- Press the **Load** button and the load weight displayed will increase. The display is the weight in kilograms within the range allowable for the wash program selected.

To Start the Program

After you have selected your options and placed detergent within the dispense turn on the water tap and press the **Start / Pause** button. The screen will display the current program progression with icons from left to right. It also displays the remaining program time.

End of the Program

When the program is finished the display will show “End” and the machine will turn off after 30 seconds. The door lock will also release within 2 – 3 minutes.

1. Turn off the water tap.
2. Open the door and remove the washing.
3. Leave the door open slightly to discharge any humidity from inside.

To Cancel the Program or Reselect the options

1. Press the **On/Off** button for 2 seconds to shut down the program.
2. Select the new program and options.
3. Press **Start / Pause** to start the new program without adding any extra detergent.

Mute Function

The buzzer and alarm can be turned off by pressing the **Delay** and **Load** buttons at the same time for 3 seconds.

Child lock

To protect children the appliance has a **Child Lock** function. This will disable the program selector dial and the option buttons.

- After the program has started press the **Temp** and **Spin** at the same time for 3 seconds. The display will show **SAFE ON** and the **Child Lock** icon will flash.
- Follow the above steps to unlock this function.

Door Lock Icon

After the program starts the **Door Lock** icon will flash and the door will be locked.

- The door is always locked when a program is running. It is not possible to open the door whilst the icon is flashing and trying to forcibly open the door will cause damage to the appliance.
- If you wish to open the door due to an emergency you must press the **Start / Pause** button. It is important to check the level of the water inside the drum, and the water temperature, before trying to open the door.
- If the door will not open after 2 – 3 minutes you can select the spin program to drain the water from the drum. Switch off the appliance and open the door.

Safety Notice. If the program is interrupted during the wash the temperature of the items inside, and the drum, may be very high. To avoid any scalding, or burns, care must be taken before removing any items from the drum.

Tap Icon

Inlet Water Tap Icon Flashes

If the appliance detects that no water has entered the drum the **Tap** icon will flash. Make sure the water tap is turned on and press the **Start / Pause** button. If the icon continues to flash please refer to the user manual **Failure Handling Guidance**.

If this should happen during the program the display will show a failure code. A description of the failure codes can be found in the **User Manual**.

Adding Clothes After the Program Has Started

If you need to add other items of clothing after the program has started you must check the level of the water inside the drum. If it is safe to open the door press the **Start / Pause** button.

- The remaining program time on the display will flash.
- The door lock indicator will go out and the door can be opened after 2 – 3 minutes.
- If the door lock does not stop flashing this indicates that the temperature inside the drum is above 50°C, or it is too late in the program to add further items of clothing.

Programme instructions

1. The standard 60°C and 40°C cotton programmes, referred to as ‘standard 60°C cotton programme’ and ‘standard 40°C cotton programme’, and that they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, in addition, the actual water temperature may differ from the declared cycle temperature.
2. The power consumption of the off-mode is 0.49W, and of the left-on mode is 0.49W.
3. The type of detergents suitable for the various washing temperatures.
4. Remaining moisture content: 53%.
5. The information of standard programmes:

	CO40 _{1/2}	CO60 _{1/2}	CO60
Main Wash Duration (Min)	131	162	162
Programme (Min)	173	204	204
Energy Consumption (kWh)	0.55	0.86	0.85
Water Consumption – Main Wash (L)	11	11	17
Total Water Consumption (L)	32	32	43

Add detergent, close the door and set the program

Load the items to be washed in the drum. Add the detergent into the relevant compartments for the type of program you are going to select, see the Detergent Compartment section on page.

1. Press the **On/Off** button.
2. Rotate the selector dial to the required program.
3. The display window will show the program length (hours : minutes), temperature, spin speed and additional function options.
4. The recommended temperature and spin speed will flash on the display. Press the Temperature button to set the desired wash **temperature** and the spin button to select the spin speed.

Select additional functions

To change or add any of the functions press the respective button and the display will flash. Press the button again until the chosen option flashes and then press select.

Prewash

Press the **Option** button until the Prewash icon flashes and press **Select**. Add detergent into the Soak compartment of the detergent drawer.

This function cannot be selected if you select Eco Wash function.

Eco Wash

Press the **Option** button until the Eco icon flashes and press **Select**. This function is designed to reduce the amount of electricity, water used and save time during the program. The Eco icon will continue to flash until the program is finished.

Rinse Hold

Press the **Option** button until the Rinse Hold icon flashes and press **Select**. Selecting this function will keep the clothing suspended in water after the last rinse, to prevent the fabrics from creasing. To spin the clothing, and complete