


Quick User Manual

WFHV9014/WFHV9014S

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately.

- A. “Start/Pause” button
- B. “Options” button
- C. “Delay End” button
- D. “Spin” button
- E. “Temp.” button

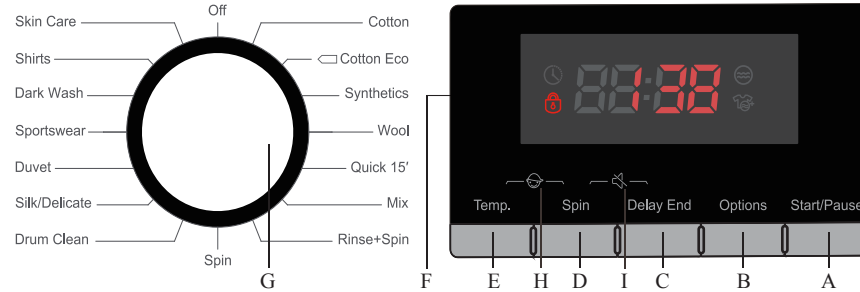

Hisense

- F. Program and function status display window
- G. Program selector
- H. Child Lock Function
- I. Mute Function

Program	Care Label	Material / Level of Soiling	Maximum Wash Load kg	Detergent Compartmentt			Wash Program Functions						Maximum spin speed rpm
				Prewash 	Main wash 	Softener 	Delay End 	Prewash	Extra rinse	Default rinse times	Spin 	Temp.	
		-Washing temperature selected as per the Care Label instruction.											
Cotton --,20°C, 30°C, 40°C, 60°C, 95°C		Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function.	9.0	*	Yes	*	*	*	*	2	*	*	1400
Cotton Eco (1) --,20°C, 30°C, 40°C, 60°C, 95°C		Eco wash for cotton and linen. Can reduce washing time and power consumption.	9.0	*	Yes	*	*	—	*	2	*	*	1400
Skin Care --,20°C, 30°C, 40°C		Extra rinse time. Making sure no residual detergent on textiles to protect skin form irritability.	4.0	*	Yes	*	*	*	*	4	*	*	1400
Synthetics --,20°C, 30°C, 40°C, 60°C		Moderately soiled synthetics, cotton blended fabrics.	4.0	*	Yes	*	*	*	*	2	*	*	1200
Wool --,20°C, 30°C, 40°C		Machine washable wool. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	*	2	*	*	600
Shirts --,20°C, 30°C, 40°C, 60°C		Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	4.0	—	Yes	*	*	—	*	2	*	*	800
Dark Wash --,20°C, 30°C, 40°C, 60°C		Dark textiles made of cotton and dark easy-care textiles	4.0	*	Yes	*	*	*	*	2	*	*	1000
Quick 15' --,20°C, 30°C, 40°C		Cotton, mixed fabrics. Items worn for a short time or newly bought.	1.0	—	Yes	*	*	—	*	1	*	*	800
Mix --,20°C, 30°C, 40°C		Mixed loads of moderately soiled cotton and synthetic fabrics.	4.0	*	Yes	*	*	*	*	2	*	*	1400
Sportswear --,20°C, 30°C, 40°C		Sportswear and leisure wear made from microfibre fabrics.	4.0	*	Yes	*	*	*	*	2	*	*	1000
Duvet --,20°C, 30°C, 40°C		Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down.	4.0	—	Yes	*	*	—	*	2	*	*	600
Silk/Delicate --,20°C, 30°C, 40°C		Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	*	3	*	*	600
Drum Clean 95°C	—	Program to remove dirt and bacterial residue that can breed in the machine after it has been used for a period, especially when low temperature washes are used regularly.	—	—	Yes	—	*	—	—	1	—	—	600
Rinse +Spin	—	This program is defaulted to two rinses and spin.	9.0	—	—	*	*	—	*	2	*	—	1400
Spin	—	Select the length, and speed, of the spin manually.	9.0	—	—	—	*	—	—	0	*	—	1400

* : Optional Functions Yes : Detergent Required : Cannot be selected -- : Temperature of unheated water

(1) Wash performance test programs are: cotton eco 60°C, maximum speed; cotton eco 40°C, maximum speed.

Energy consumption 217 kwh per year, based on 220 standard washing cycles for cotton eco programmes at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used.

Water consumption 10560 litres per year, based on 220 standard washing cycles for cotton eco programmes at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

PARAMETER	
Model	WFHV9014/WFHV9014S
Washing Capacity	9.0kg
Max.spin speed	1400rpm
Net Weight	62kg
Dimension(WXDXH)	595X595X850mm
Rated Voltage	220-240V~
Heating Power	1900W
Washing Power	300W

Add Detergent, Close the Door and Set the Program

Load the clothes to be washed in the drum and close the door. Add the detergent into the relevant compartments for the type of program you are going to select, Add detergent as described in **Detergent and Additives** section of **User's Operation Manual**.

1. Turn on the power.
2. Spin program selection button to required program, “off” must be passed through if pointer’s initial position is not “off”,start up.
3. Select washing temperature, spin speed and delay time by pressing “**Temp.**”, “**Spin**” and “**Delay End**” buttons.
4. Press “**Options**” button to select additional functions.
5. After starting the program, display window displays program length (hours: minutes)and additional function options in sequence.

Addition function selection

At standby state, press “Options” button to select additional function for current program. Select only one function for each press, and then corresponding icon flashes. After starting up, program cannot be changed.

Pre-wash

Select the function to conduct pre-wash so as to enhance washing effects and better remove stains. This function is suitable for heavy dirt clothes.

Before inflowing, laundry detergent/ washing powder can be added to pre-wash box, and washing powder must be added to main wash box.

Extra Rinse

After set the function of rinsing adding, the program runs the rinsing process once again before running the softening, and the total running time of the program increases accordingly.

Door Lock Icon

After the program starts the Door Lock icon will light up and the door will be locked.

After completing program, door lock unlocks automatically.

During pause, if door opening condition can be met halfway, the door lock will unlock and its indicator light will go out.

When door lock indicator light flashes, door shall not be opened forcibly so as to avoid personal injury.

Delay End Function

Delay function allows to run the machine at the consumers’ convenience, for example, at night when electricity is cheaper.

Only under the standby mode, this button is valid for selecting the reservation time.

After the reservation function is selected, the time will increase 1h when each time the reservation button is pressed. Before reservation, if the program time does not satisfy the integral multiple of 1h, it shall be completed by pressing the reservation key for the first time, and then the time increases 1h when each time the reservation button is pressed. If the reservation is selected, before the program runs, the current reservation can be canceled by turning the button to select other programs.

The delay time must be longer than the wash program length as the delay time is the time program will finish. For example: if the selected program time is 02:28, the delay time selected must be between 03:00 and 24:00.

When the reservation process is operated, the icon of ‘reservation time’ will be on. When the reservation process is finished, the icon of ‘reservation time’ will be off, while the icon of the ‘remaining time’ will be on.

Mute Function

Press “**Spin**” and “**Delay End**” button simultaneously for 2 seconds, the screen will show “**bEEP OFF**”. The Mute state will be set. In this state, all the beep will be disabled, except for the error alarm.

Repeat the same process, Mute state will be disabled, the screen will show “**bEEP On**”.

The Mute function will continue to take effect before you turn it down manually.

Child Lock

To strengthen the safety of children, this machine is equipped with Child Lock function.

When the programme starts, press “**Temp.+Spin**”button for 2 seconds. The machine will beep once. Scree will show “**SAFE On**”. After 2 seconds, the screen will show the program left time. Repeat this operation, the machine will beep once. The screen will show “**SAFE OFF**”, the Child Lock will be released.

When the Child Lock is set, all function buttons except “**Off**” will be shielded. Once any function except “**Off**” is chosen, the machine will beep. The screen will show “**SAFE On**” for 2 seconds. After the program ends, Child lock function will release automatically. Any error alarm will release the Child Lock function. Turn off and on the machine manually will reset the machine.

Child Lock function cannot be set when the machine is in standby state.

To Start the Program

After you have selected your options and placed detergent with in the detergent dispenser, turn on the water tap and press the “**Start / Pause**” button. It also displays the remaining program time.

To Cancel the Program or Reselect the Options

1. Rotate the program to “**Off**” for 3 seconds to turn off the machine.
2. Select the new program and options.
3. Press “**Start / Pause**” button to turn on the machine without adding any extra detergent.

End of the Program

When programme finished its running, it will display “**End**”. The machine will not turn off automatically.

1. Rotate the program to “**Off**” to turn off the machine;
2. Close the tap;
3. Open the door and take the washed clothes out;
4. Slightly open the door to remove moisture in the pump.

Reload in Process

If you want to reload clothes in the process of washing, please press “**Start/Pause**” button.

If the door can be opened in the process, remaining time and the Door Lock icon in display will flash. Then the Door Lock icon will go out, and the door can be opened.

If the Door Lock icon doesn’t flash, it indicates that current temperature is over 50 ℃ or you have passed the time for reloading in the process, namely no clothes allowed to load into the machine.

Programme Instructions

1. The standard 60 ℃ and 40 ℃ cotton programmes, referred to as ‘standard 60 ℃ cotton programme’ and ‘standard 40 ℃ cotton programme’, and that they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, in addition, the actual water temperature may differ from the declared cycle temperature.
2. The power consumption of the off-mode is 0.49W, and of the left-on mode is 0.56W.
3. The type of detergents suitable for the various washing temperatures.
4. The information of standard programmes:

	CO40 _{1/2}	CO60 _{1/2}	CO60
Main Wash Duration (Min)	171	198	198
Programme (Min)	226	256	256
Energy Consumption (kWh)	0.69	0.91	0.93
Water Consumption – Main Wash (L)	14.3	14.1	19.8
Total Water Consumption (L)	41	41	57
Remain moisture content (%)	52	52	53